8. Phone Application Settings

8.1 Download and Installation

Please scan the QR code below to download and install.









8.2 Account registration

Click the app to enter login interface as show in the right.

User name: (EMAIL) Password: (set as you like) After setting, please enter the code and click "Register".

After the registration is successful, the interface will automatically jump to the login interface, and the user clicks on login.



lome

8.3 Add Panel

To view the video through the APP, the user needs to scan the QR code to add the camera to the APP device list. After the initial login, the device automatically enters the interface for adding a device. As shown in Fig.5, click the blue icon " + " to enter the code scanning interface. Scan the QR code on the sticker at the bottom of the camera, and a prompt window will pop up after scanning successfully, as shown in Fig. 6.



HA-8403 Indoor Infrared IP Camera Installation Instruction

1. Introduction

HA-8403 IP camera apply Linux operation system and Hisilicon chip Mstar313E. The device is efficiency and small with high stability and reliability. It can be programmed via IE browser, ONVIF PC clients, CMS clients, phone application, mainly used for home, office, warehouse, shop, school and so on.

2. Parameters

Operation system: Embedded Linux

User interface: IE browser, CMS PC client, phone application Video format: mainstream 1080P/D1 25fps

Sub-stream D1/CIF 25fps

Network interface: 10M/100M adaptive network interface

Storage interface: TF card, support max 128G (1st time, please format TF card on IE browser interface). Use a hex screwdriver to open the cover to see the TF card slot. **Image sensor**: F22, 200W (1920*1080)

Power: DC 12V == 1A

3. Network connection

3.1 Cable network

Connect the power line first, and use the network interface to connect the same router with the computer.

3.2 WiFi network

After connecting cable network, log in IE browser to set WiFi. Once finished, disconnect the cable network.

Notice: keep IP camera and computer in the same segment of IP address.

4. Camera Settings

The IP address of the camera is automatically assigned by the router. Users can obtain the IP address as follows:

X

a. Obtain "intranet search tool" for search at the seller;

b. Log in to the mobile phone APP. (APP download details see "8.Phone Application Settings") Log in to the IP address on the web page, as shown in the following figure.

🜔 http://192. 168. 1. 52/

After logging in, the web page displays the download page and downloads as prompted. After download, right click the icon to run it as a administrator, Follow the popup prompts to install.



After the software is installed, re-log in the device's IP address on the web page and enter the login page. As shown in Fig. 1, enter "admin" at the user name,

Notice: before installing the ActiveX, close all IE browsers.

select "English" for the language option, and click "OK" to enter the main interface. Fig. 2.

Reminder: When the device is shipped from the factory, the user name is admin, and the password is empty. Users can directly log in to the main menu. In order to consider the security of the operation of the device, the administrator is required to enter the "user management" item on the "System Settings" page of the system to modify the password of this device.



5. Set WiFi in IE interface

After entering IE main interface, click icon 🛅 set network "Basic setting" - "Set WiFi".

as shown in Figure 3. Encryption method is "AUTO", check "2G enable" (as shown in the figure on the right) ssid and password are WiFi name and WiFi password respectively. After setting, click "Save", "Update", pop-up window prompts "Parameter setting is successful", Wait 5 seconds to disconnect the network cable.

	Set Network		
Basic setting	Set Network Set Port Set WiFi]	
Advanced setting Set platform	WiFi working Client	Encryption AUTO	•
JP filter	I 2G Enable		
	ssid		
	PWD		🗆 Display
	□ 5G Enable		
	ssid		
	PWD		Display
	Save	Update	



6. Video viewing and recording

► Video view: Right-click on the video display area and the setup item appears. As shown in Fig. 4, the main stream is the video stream of the device. The substream is set to save the traffic during network transmission. Condition selection stream opens the video for viewing.

► Manual recording: After opening the video, right-click to select "Start Recording" to start recording, and right-click "Stop Recording" to end the recording.



► Timed recording/alarm recording:

Click on the main menu icon **b** to select "video setting" - "record schedule". The user will set according to the actual situation. The alarm recording will only be recorded if the alarm is triggered within the set time period.

▶ Motion Detection: Click on the main menu icon 🖶 to select "Alarm Settings" - "Device Alarm Settings" - "Motion Detection". When there is a change in the screen, if someone walks past and the lens is moved, the system will automatically record according to the settings.

- Tips: a. If a scheduled recording is set in the time period, manual recording will not work during this period of time.
 - b. The default recording is stored in the D drive of the computer. When recording manually, the folder where the video is recorded will be prompted.

7.TF card insertion

Follow these steps to insert a TF card:

